




Installation Instructions

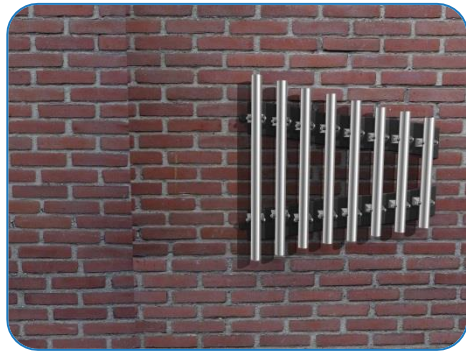

1. Position the 2 sections of the Freechimes Symphony in desired location, according to correct Key stage height, this may require 2 persons.

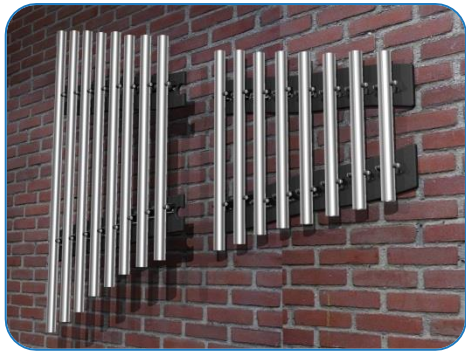



2. Mark hole locations (X10) using the pre drilled holes in the Black HDPE Backboards

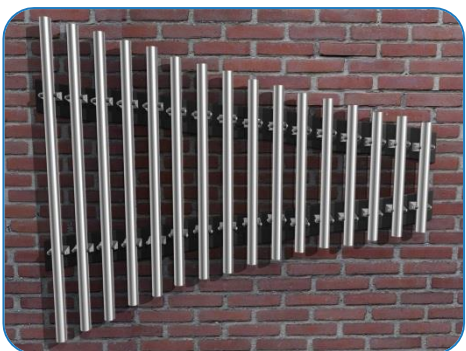

3. Drill hole locations (X10) according to your chosen fixings (frame fixings, wall bolts or chemical anchors) depending of the structure of the wall.

4. Fix through Backboards (X10) with suitable fixings (not supplied) in correct orientation and Key stage

5. Beaters can be fixed to Backboards or directly to wall depending on customers preference. 1 Pair at each end and one in the centre.

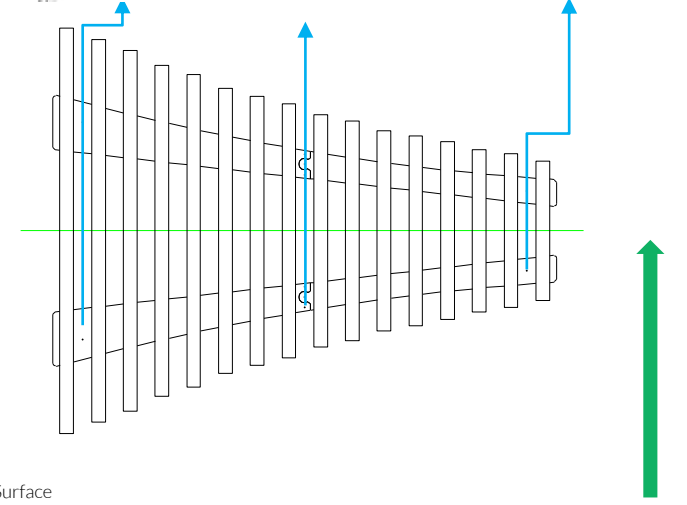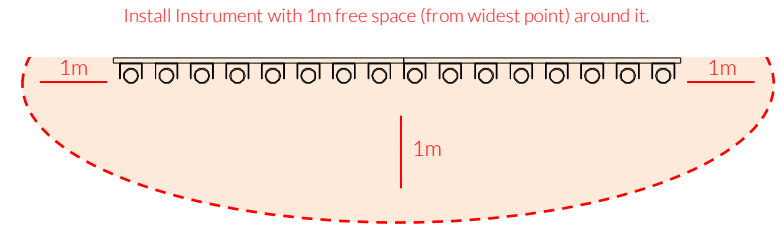


KS1,2,

KS1 - 850mm
KS2 - 1100mm

Wall Fixed

Freechimes
Pentatonic
Symphony

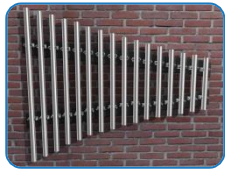

Components:



M6 Saddle Straps
X3



Pin Torx 25
Driver Bit X1



10x38mm
Secure Screw
X6

Metric Conversion:
850mm/ 33"
1m/ 39"
1100mm/ 43"



Wall fixings are not supplied, installer will select suitable method of fixing.

Wall Anchors
not supplied



Spares available from
percussionplay.com or from your
local distributor

48 Kg