

#### Ground Fixed Calypso Chimes Page 1 of 4



Instrument Components Per Post:

M6x20 Security Screw



M6 Saddle Strap



x2

M6 Square Nut



Beater Holder

Metric Conversion: 250mm/10" 400mm/16"

450mm/18"

1510mm/59" 1195mm/473/64"

BS EN 1176

1.5m/59"

## Installation Instructions









Weight of heaviest part 7.5kg

- 1. Instrument will arrive on site fully assembled. (1.1) (See Assembly Guide)
- 2. Attach Ground Fixing studs holes in base of centre pos.t (1.2) (See Ground Fix Post Installation Sheet)
- 3.Excavate 1 hole for the Steel legs 250mm diameter by 450mm deep in desired location upon decision from customer.
- 4. Locate (lower) leg into hole, making sure it is vertical and level prior to concreting in place.
- 5. Once happy with location of the Instrument, fill holes using rapid hardening concrete. Be sure to compact concrete around legs and leave to dry according to manufacturers guidelines.
- 6. Attach the holder, beater and the saddle strap on each side of the post. (1.3)

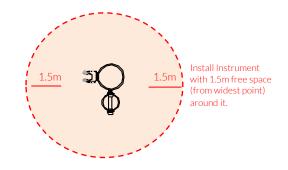

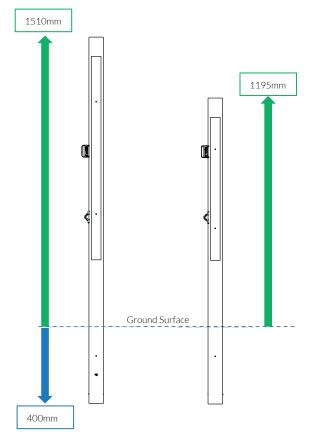



Ground Fix Components Per Post:









#### Ground Fixed Calypso Chimes Page 2 of 4



#### Instrument Components Per Post:

M6x20 Security Screw

M6 Saddle Strap



x2

M6 Square Nut



Beater Holder

Thread Lock Solution Required (Not Supplied)




# Assembly Guide PPRCHP







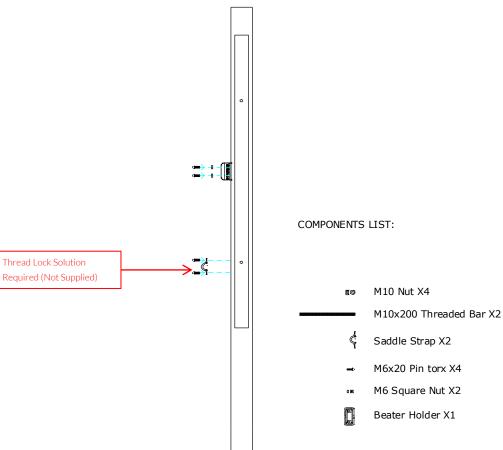



Ground Fix Components Per Post:









### Ground Fixed Calypso Chimes Page 3 of 4



#### Instrument Components Per Post:





M6 Saddle Strap



**S** x2



×1


Beater Holder

#### 600mm min spacing

Thread Lock Solution Required (Not Supplied)



# Assembly Guide PPCALCH

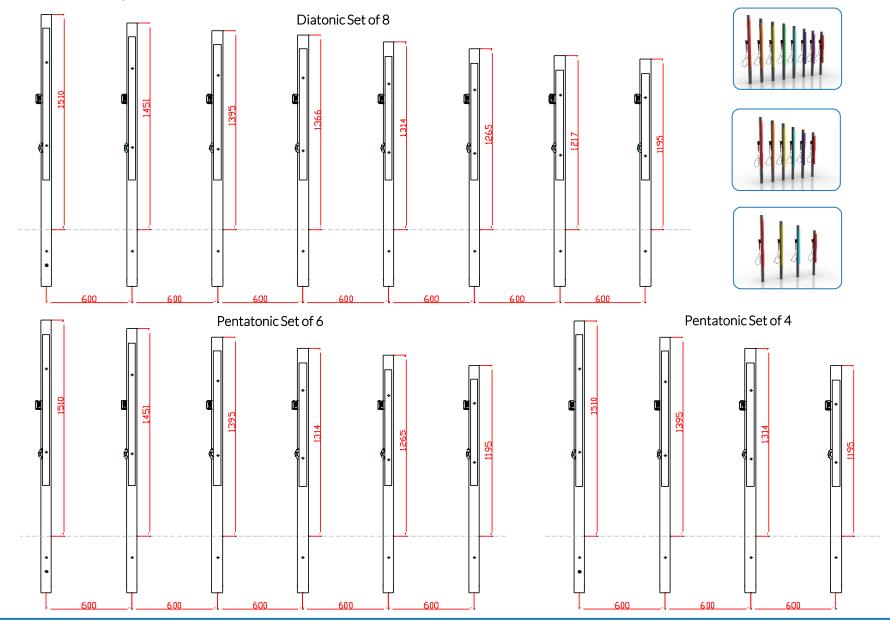













# Ground Fixed Calypso Chimes Page 4 of 4



Instrument Components Per Post:






M10 Nut


Metric Conversion: 50mm/ 2" 250mm/ 10" 350mm/ 14" 400mm/ 16" 450mm/ 18"



## Ground Fix Post Installation

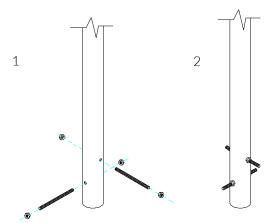


Fix M10x 200 Threaded bar in place using M10 Nuts

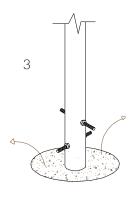

Excavate 1 holes with a 250mm diameter tapering down to 350mm diameter and 450mm depth

400mm min depth

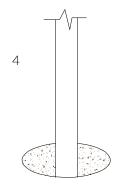

Compact base of hole with 50mm of aggregate.
Lower ground Fix post attached to instrument into hole (check instrument straight and level before filling with concrete)

