

Installation Instructions

1. Position Freechimes in desired location, according to correct Key stage height, this may require 2 persons.

2. Mark hole locations for each of the brackets at correct spacing in desired location

3. Drill hole locations according to your chosen fixings (frame fixings, wall bolts or chemical anchors) depending of the structure of the wall.

4. Fix through Brackets to surface with suitable fixings (not supplied) in correct orientation and Key stage and attached notes with fixings provided.

5. Beaters can be fixed to Backboards or directly to wall depending on customers preference.

Wall Fixed
Freechimes
Notes Only
Alto/ Soprano



Components:



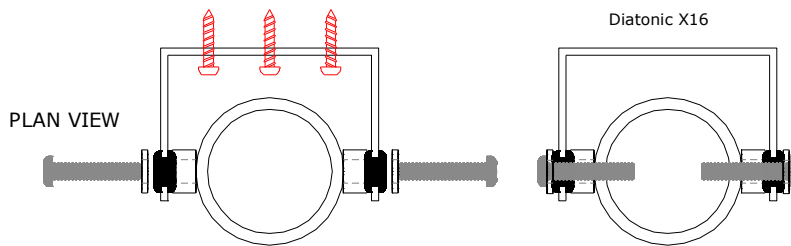
Eye Straps
X2







10x38mm
Secure Screw
X4

Thread Lock Solution
Required (Not Supplied)

Metric Conversion:
700mm/ 28"
850mm/ 33"
1m/ 39"



- 
 M6 Form C Washer
Pentatonic X24
Diatonic X32
- 
 RUBBER WASHER
Pentatonic X24
Diatonic X32
- 
 RUBBER GROMMET
Pentatonic X24
Diatonic X32
- 
 M6x 30 PIN TORX
Pentatonic X24
Diatonic X32



Pair Small/Large
Beaters X1

Wall fixings are not supplied, installer will select suitable method of fixing.

