

Installation Instructions




1. Position chimes in desired location, according to correct Key stage height, this may require 2 persons. Align the instrument with the **C5 chime** (with vinyl tape strip) on the left.

2. Mark hole locations (X4) on backboard between 1st and 2nd notes at each end, making sure instrument is level.


3. Drill hole locations (X4) according to your chosen fixings (frame fixings, wall bolts or chemical anchors) depending of the structure of the wall.

4. Fix through Backboards (X4) with suitable fixings (not supplied) in correct orientation and Key stage.

5. Beaters can be fixed to Backboards or directly to wall depending on customers preference.

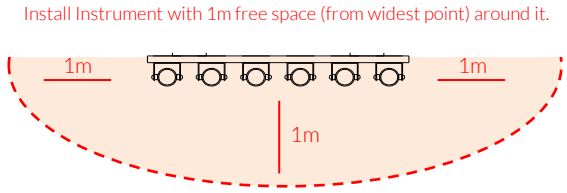

Remove Vinyl Tape (left hand chime)

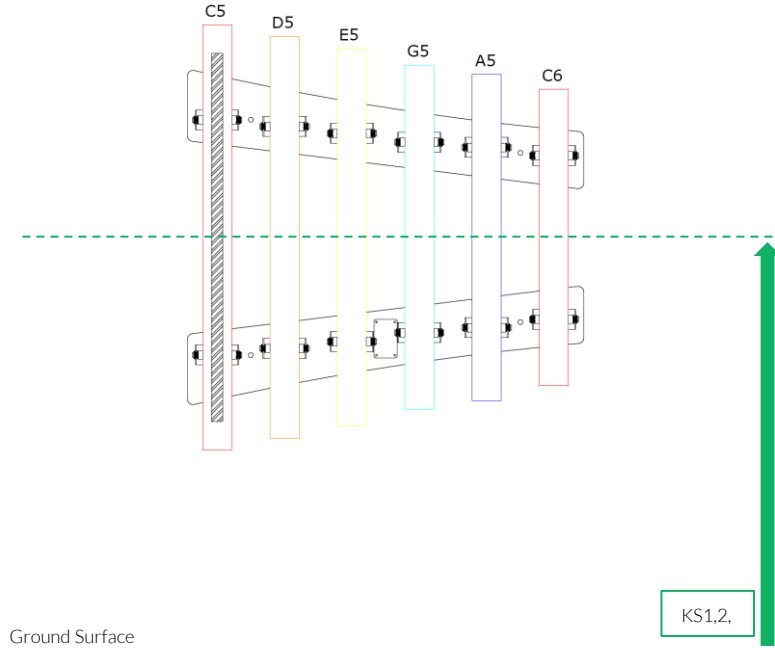

KS1 - 700mm
KS2 - 850mm

Wall Fixed Rainbow Trio Chimes



Components:



M6 Saddle Straps
X2



10x38mm
Secure Screw
X4



Pin Torx 25
Driver Bit X1

Metric Conversion:
700mm/ 28"
850mm/ 33"
1m/ 39"

Weight of heaviest part 8 kg (chimes)



Pair Small/Large
Beaters X1

Wall fixings are not supplied, installer will select suitable method of fixing.



Spares available from
percussionplay.com or from your
local distributor

8 Kg