

Surface Fixed

Tembos Blues Page 1 of 3



Components:



M10x100 Security Screw



x28

M10 Flanged Slide Bearing




M6 Eye Bolt

Metric Conversion: 730mm/28 47/64" 1.5m/59" 3600mm/14147/64"



Installation Instructions

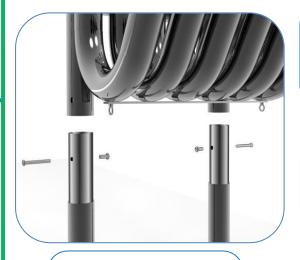

2. Attach Surface Fixing posts to legs (1.2) (See Ground Fix Post Installation Sheet)

1. Locate Tembos frame onto

legs and, and bolt into place using pre drilled holes, 2 bolts


per post.(See Assembly

Guide)



4. Fix to Surface using recommended ground anchors not supplied

5. Make sure all fixings are covered and secure using cover caps provided

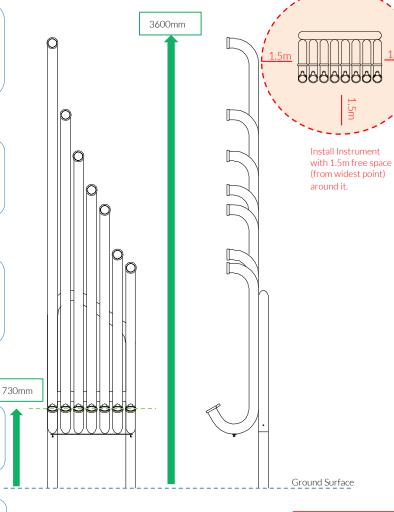















CAUTION: Tembos

surface can get hot

in direct sunlight, if possible install in shaded areas.



Surface Fixed

Tembos Blues Page 2 of 3



Instrument Components:



M10x100 Security Screw




M10 Flanged Slide Bearing



M6 Eye Bolt

Thread Lock Solution Required (Not Supplied)



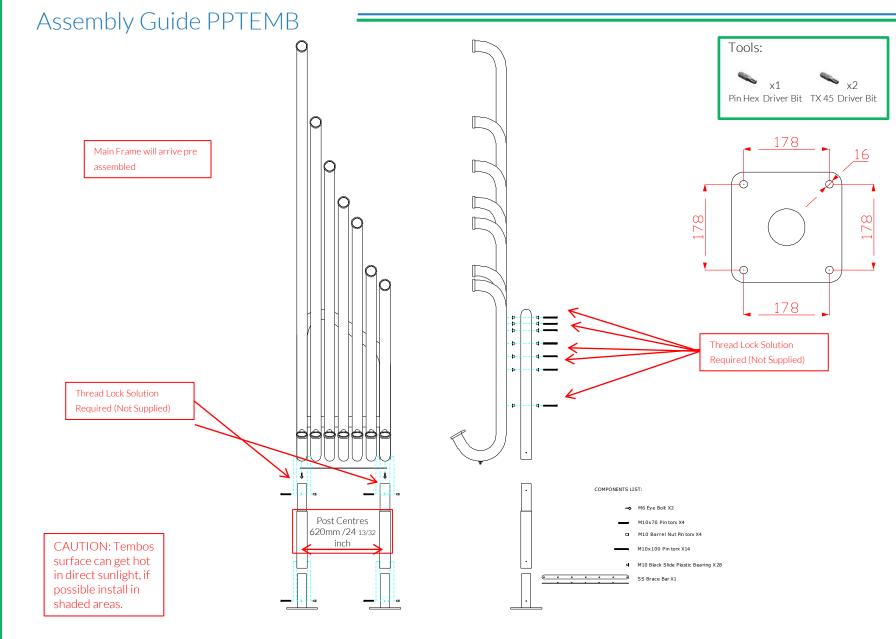















Surface Fixed

Tembos Blues Page 3 of 3



Components:



M10 Barrel Nut



M10x70 Security Screw




2 Part Cover Cap


Thread Lock Solution Required (Not Supplied)

Surface Fix Post Installation




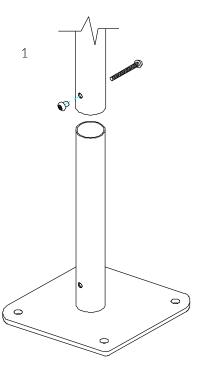

Locate the Surface fix Plate into the leg of the instrument.

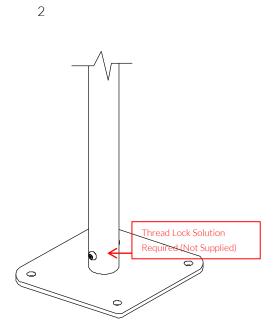

Fix instrument to Surface fix plate using M10 bolt and Barrel Nut and use thread locking solution to prevent fixings working loose.

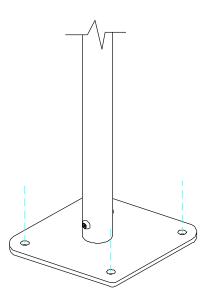

3

Fix Surface Plate to the ground surface Ground **Anchors Not provided** cover fixings with caps provided



