

Surface Fixed TUTTI Page 1 of 2



Instrument Components:



M6x20 Security Screw



M6 Saddle Strap



M8x60 Security Screw

Metric Conversion: 300mm/12" 350mm/14" 1555mm/61" 1.5m/59"




Installation Instructions








Weight of heaviest part (TUTTI Frame)




- 2. Align and secure each angled post to the centre post using M8x60mm security screws. Use the ident markers at their bases for reference. (See Assembly Guide Sheet).
- 5. Insert 6no. M10x20mm Screws into pre drilled holes in frame using TX45 bit to attach frame to surface base.
- **6.** Attach 3No. Notes Panels to Frame and beater to each arm. (See Assembly Guide Sheet).
- 7.1 ocate Tutti in desired location and mark holes to fix to desired surface.
- 8. Fix Surface Plate to level surface using Coachscrews, Rawlbolts, chemical anchors or similar as deemed appropriate by Installer.
- 9. Make sure all fixings are covered and secure using cover caps provided.

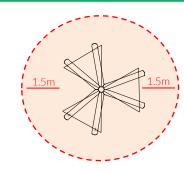

Install Instrument with 1.5m free space (from widest point) around it.

> **CAUTION: TUTTI** surface can get hot in direct sunlight, if possible install in shaded areas.

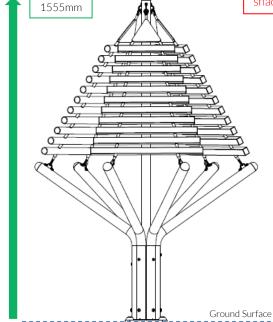



Surface Fix Components:









Surface Fixed TUTTI Page 2 of 2



Components:



M10x200 Threaded Bar



M10 Nut




M8x60 Security Screw

Thread Lock Solution Required (Not Supplied)



Assembly Guide PPTUTTI



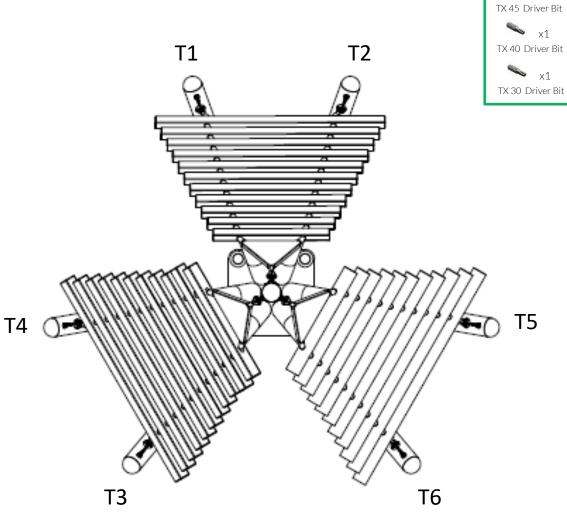











Tools: