


Installation Instructions

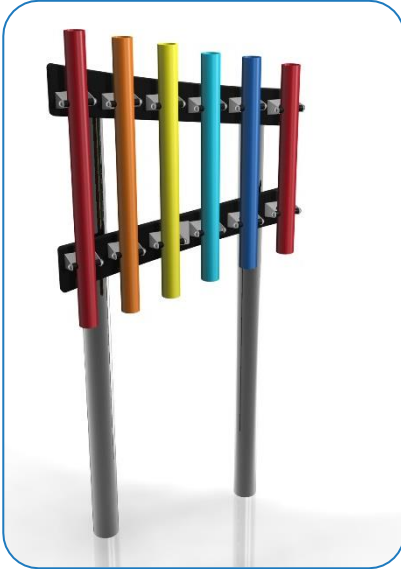

1. Lay both posts on a **non-abrasive level surface**. Line up the pre-drilled holes in the backboards with the holes in the posts. The **C5 chime with vinyl tape strip goes on the left**. Fix in place using **M8x40mm screws** supplied (see installation guide).

2. Attach Ground Fixings to base of posts (See Ground Fix Post Installation Sheet).


3. Excavate 2 holes on site of installation minimum **500mm deep** (adjust depth according to age range for intended players).

4. Carefully raise the instrument from the ground **with posts attached** and locate (lower) posts **into holes** making sure they are vertical and level prior to concreting in place. (See Ground Fix Sheet).


5. Once happy with location and levels, **fill holes using rapid hardening concrete**. Be sure to compact concrete around posts and leave to dry according to manufactures guidelines.

6. Beaters can be fixed to Steel posts with fixings provided.

Install Instrument with 1.5m free space (from widest point) around it.

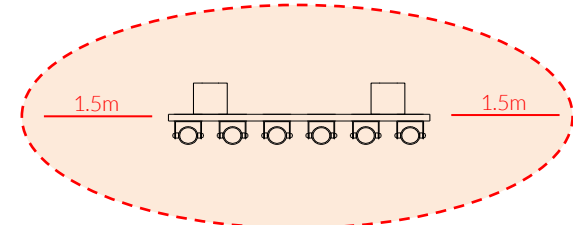

Remove Vinyl Tape (left hand chime)

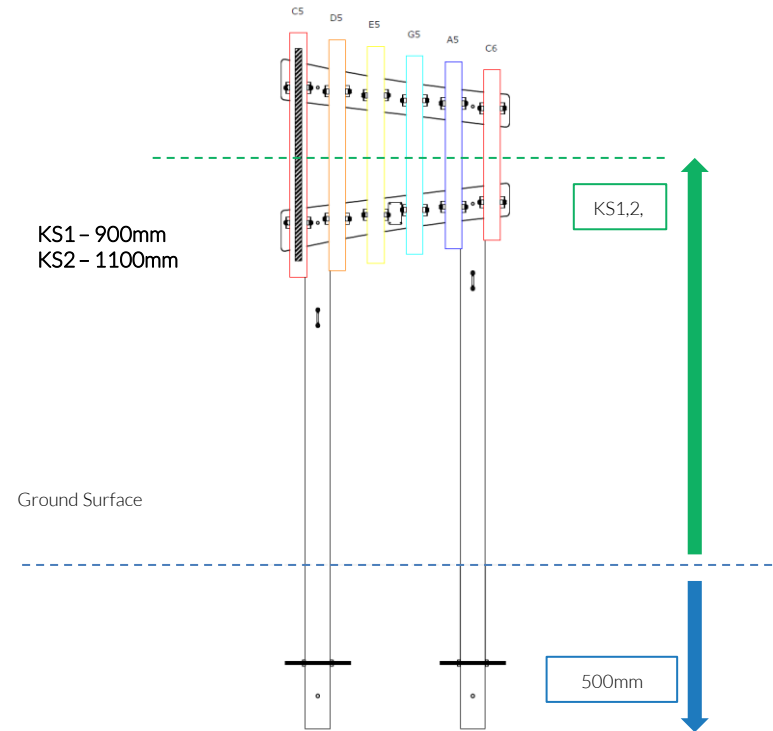

Metric Conversion:
500mm/ 19 11/16"
900mm/35 7/16"
1100mm/ 43 5/16"
1500mm/ 59 1/16"

Weight of heaviest part 8.35kg (Freechimes)

Ground Fixed

Rainbow Trio Chimes
Pentatonic 6 Notes
Page 1 of 4



Components:

M6 Saddle Straps
X2

M6x20mm
Secure Screw
X4

M8x40mm
Secure Screw
X4



Pair Small
Beaters X1

Ground Fix
Components:



x4
M10x200 Threaded Bar





x8
M10 Nut



Spares available from
percussionplay.com or from your
local distributor


16 Kg

Tools:







 x1
 x1

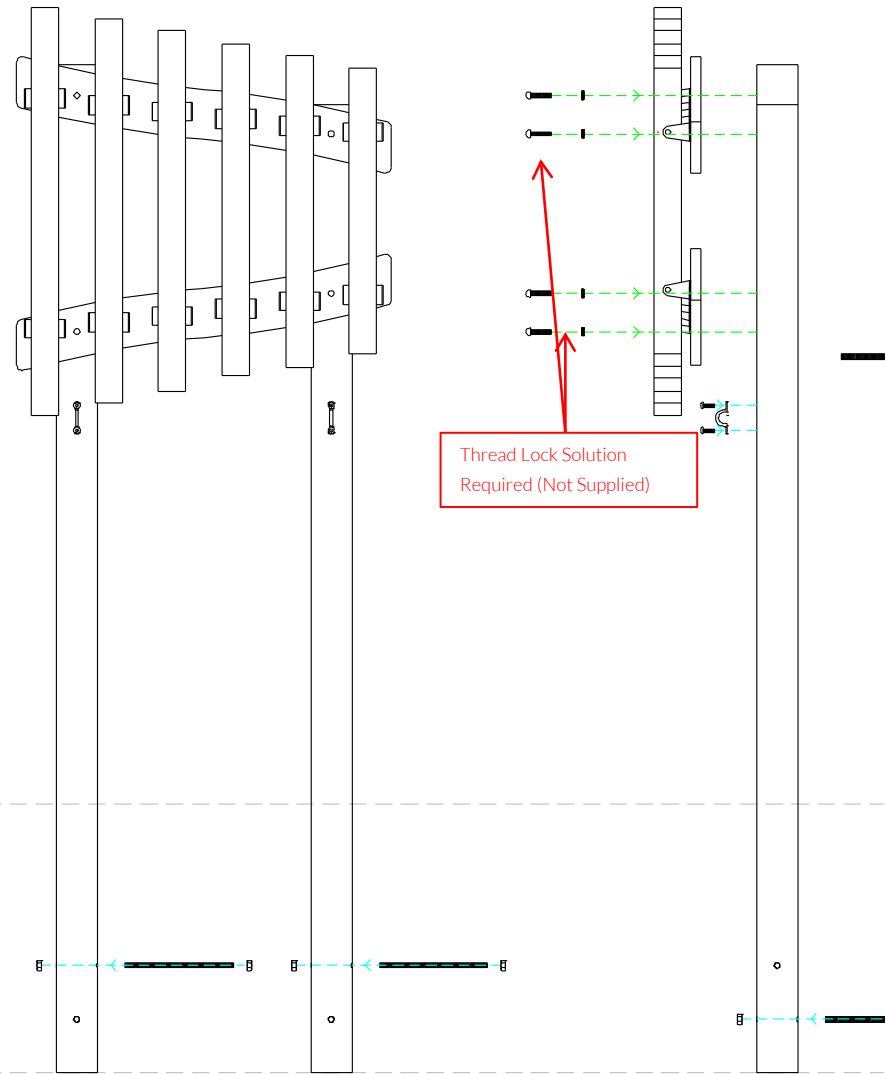TX 30 Driver Bit TX 40 Driver Bit

Ground Fixed
 Rainbow Trio Chimes
 Pentatonic 6 Notes
 Page 2 of 4




COMPONENTS LIST:

-  M10 Nut X8
-  M10x200 Threaded Bar X4
-  Saddle Strap X2
-  M6x20 Pin torx X4
-  M8 Lock washer X4
-  M8x40 Pin torx X4

Thread Lock Solution
 Required (Not Supplied)


- Components:**
-  M6 Saddle Straps X2
 -  M6x20mm Secure Screw X4
 -  M8x40mm Secure Screw X4



Pair Small Beaters X1

Ground Fix Components:

 x4
 x8

 Spares available from percussionplay.com or from your local distributor

16 Kg


Ground Fix Post Installation

Foundations should not present a hazard. These foundations are recommended as a guide, for more information on foundation details for various surface see Part 1 of BS EN 1176.

Ground Fixed

Rainbow Trio Chimes
Pentatonic 6 Notes

Page 3 of 4

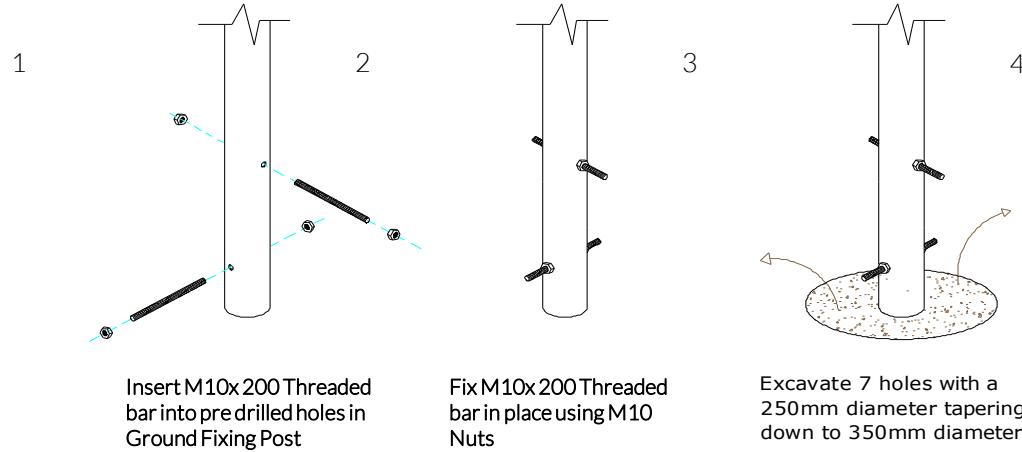


1 Insert M10x200 Threaded bar into pre drilled holes in Ground Fixing Post

2 Fix M10x200 Threaded bar in place using M10 Nuts

3 Excavate 7 holes with a 250mm diameter tapering down to 350mm diameter

Metric Conversion:
50mm/ 2"
100mm/ 4"
250mm/ 10"
350mm/ 14"
500mm/ 19 11/16"
550mm/ 21 21/32"

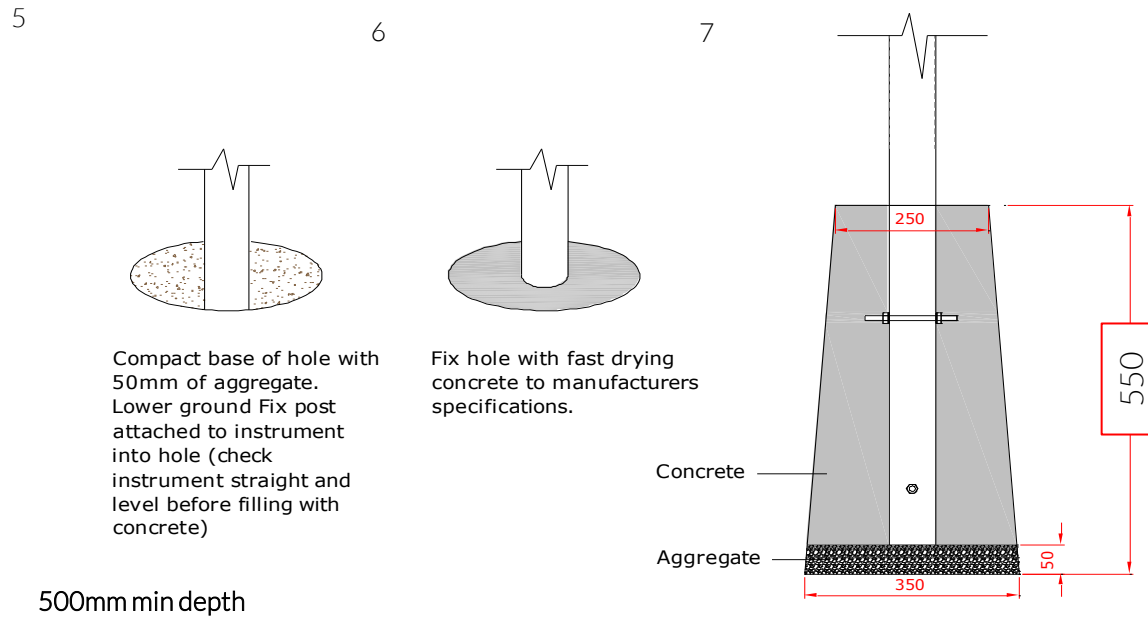

5 Compact base of hole with 50mm of aggregate. Lower ground Fix post attached to instrument into hole (check instrument straight and level before filling with concrete)

6 Fix hole with fast drying concrete to manufacturers specifications.

Concrete

Aggregate

500mm min depth

Components:



x4

M10x200 Threaded Bar



x8

M10 BZP Nut

Thread Lock Solution
Required (Not Supplied)



MADE IN BRITAIN

BS EN 1176



Ground Fix Installation

Ground Fixed


Rainbow Trio Chimes

Pentatonic 6 Notes

Page 4 of 4



472mm Pentatonic 6 Note Post Centres



1

Carefully lay 2 x legs on a level surface. Line up pre drilled holes in the backboards with the legs and ensure the instrument is aligned square with the legs. Fix in place using 8x70mm screws supplied

Metric Conversion:

- 50mm/ 2"
- 250mm/ 10"
- 350mm/ 14"
- 500mm/ 1ft 7 11/16"
- 472mm/ 1ft 6 37/64"

2

Excavate 2 holes with a 250mm diameter tapering down to 350mm diameter and minimum 550mm depth

Minimum installation depth required 550mm, to set height of instrument bury deeper until optimum playing height is achieved.

3

Compact base of hole with 50mm of aggregate. Lower ground Fix posts attached to instrument into hole (check instrument straight and level, and at correct height before filling with concrete)

4

Fill holes with fast drying concrete to manufacturers specifications. If posts protrude above instrument they can be cut down

Foundations should not present a hazard. These foundations are recommended as a guide, for more information on foundation details for various surface see Part 1 of BS EN 1176.



MADE IN BRITAIN

BS EN 1176

